



GEOVENT

INSTRUCTION MANUAL



GEOFILTER OIL

Change filters

1. **Remark:** The change of filter illustrated in this manual, is on a filter which is not installed. However, the process is the same if the filter is installed.




2. Click the lock open.




3. Gently bend the bracket about an inch upwards.



2. Lift off the lid.

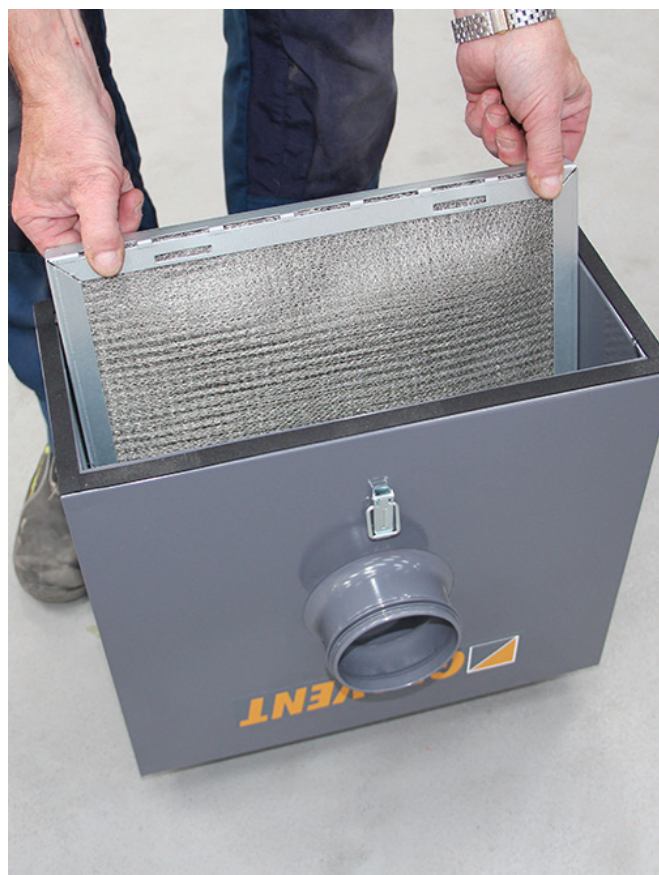


4. Loosen the filter by pushing it forward. Grab the filter at the metal frame.

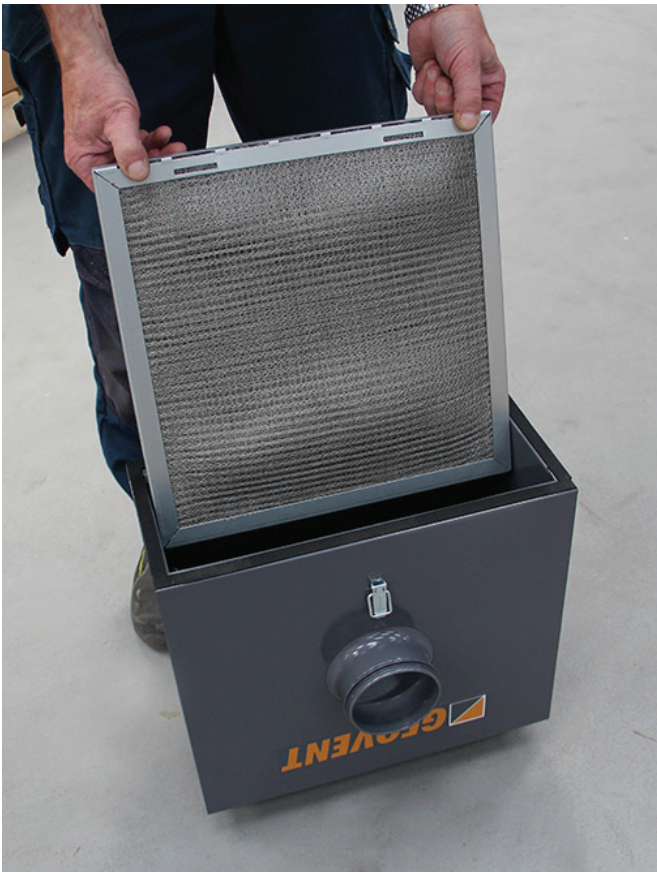

5. Pull up the filter.



7. Insert the new filter.
Gently fit it into the frame.
Push it all the way to the bottom of the filter box.

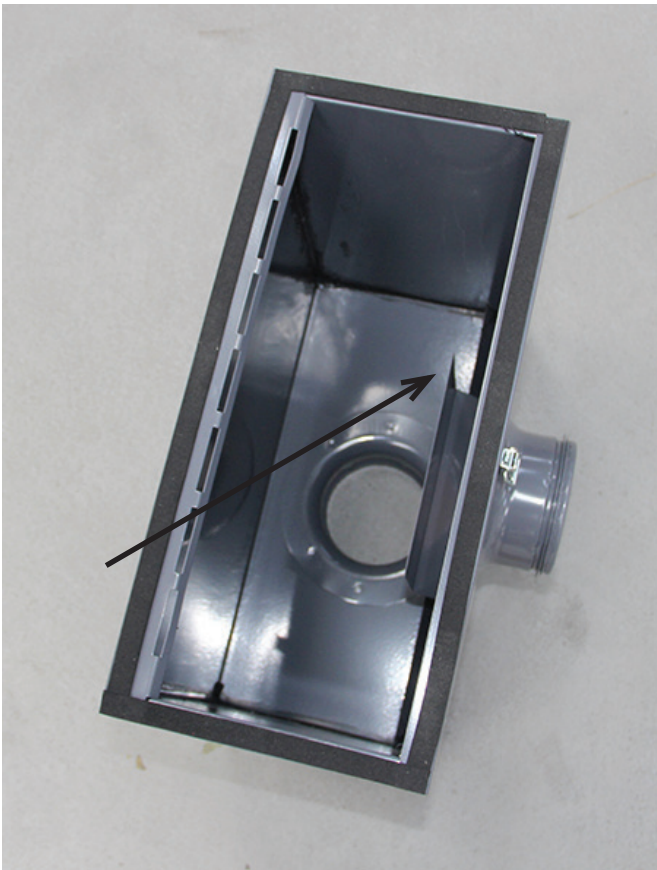

6. The filter frame must be placed within the bracket in the apposit end of the filter box.



8. Gently push the filter into place. It may be necessary to lift the filter up a littel to make it fit. Afterwords the lid is placed on the filter box and lucked.



GEOVENT

HOVEDGADEN 86 • DK-8831 LØGSTRUP
(+45) 8664 2211 • salg@geovent.dk